



Ford Focus RS MK2 Brake Cooling Outlet Manual


STEP 1

Place the SPEED Engineering cooling funnels on the wishbones of your Focus.



STEP 2

Adjust the funnels according to the illustrations.

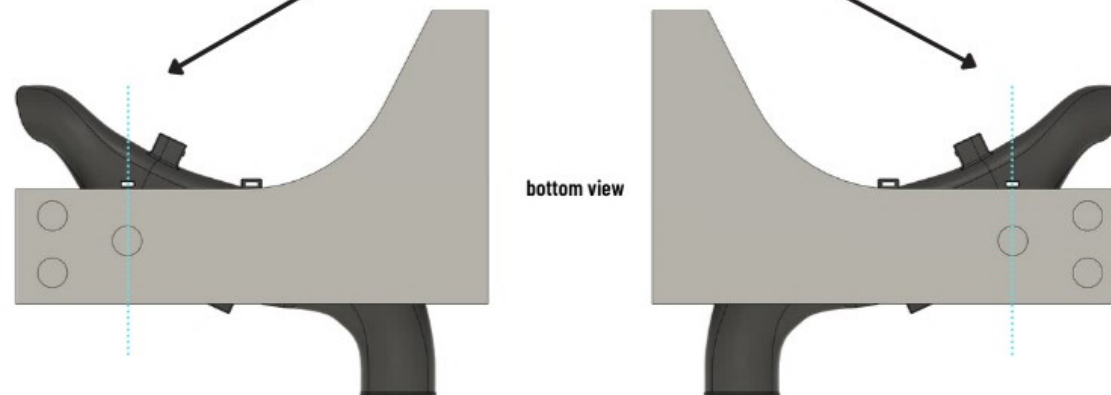


This product is designed and produced by the SPEED Engineering GmbH.

If you have any questions or comments,
please feel free to contact us.



STEP 3

Fix the cable ties according to the illustrations.

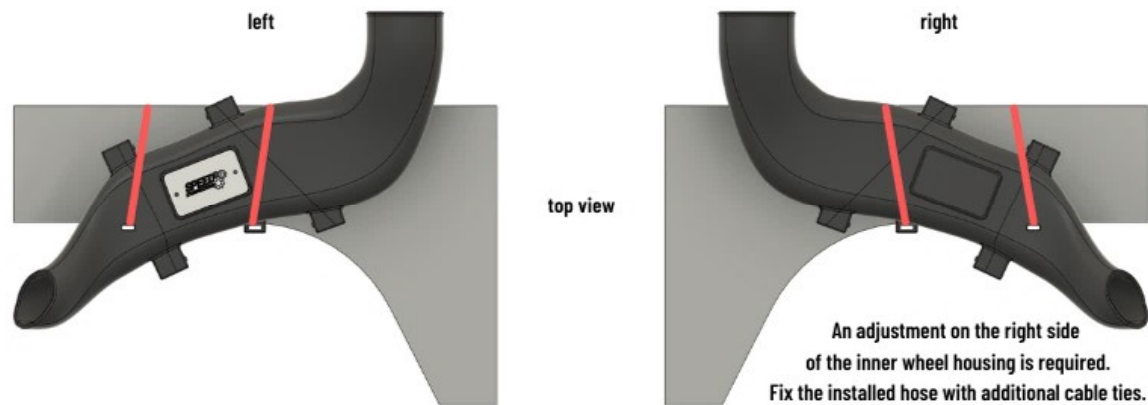

Please make sure, the hose does not collide with any components of the car by maximum steering angle in both directions.

THE HOSE BETWEEN THE AIR DUCT AND THE PROTECTIVE PLATE HAS TO BE TENSION-FREE!
PLEASE CHOOSE A LARGER HOSE LENGTH.
TURN THE STEERING WHEEL TO BOTH ENDS.

This product is designed and produced by the SPEED Engineering GmbH.
If you have any questions or comments,
please feel free to contact us.